

Installation Manual


HDIK · HFT Option Floor storage unit PKT-60U-WOP2 model

⚠ Floor Hatch HDIK60 · HFT606B models are sold separately


1. Accessories Parts

Accessories Name	Qty
Wooden Screw (3.1 x 20)	8
Pan Head Screw (4x19)	4
Hanging Bracket	1

Fitting Drawing

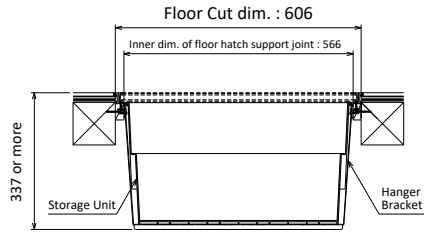

2. Floor Framing 1

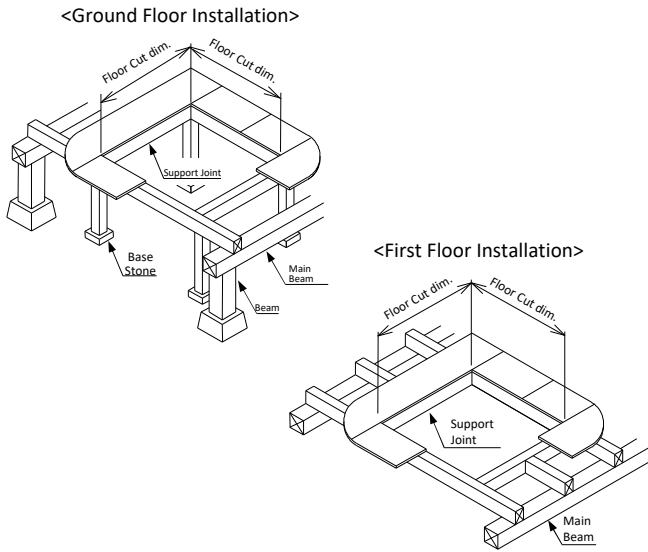


- ⚠ Enhance floor strength by inserting a beam.
- ⚠ Utilize clipped floor as a lid.
- ⚠ If renovating, be careful of the pipes underneath.

**Floor Cut dim.
606 x 606mm**

3. Floor Framing 2

Mount support joint (20 x 40mm) to be A dimension.
*Be sure to enforce so the inner dim. of the support joint is to be 566mm
(Allowable Difference +1mm)

Floor Hatch Name	A Dimension
HDIK60	27mm
HFT60B	Lid Thick +1mm

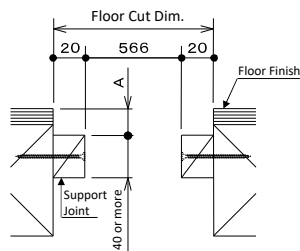


- ⚠ Be sure to enforce support joint within 566~567mm, otherwise storage unit can not be mounted.
- ⚠ Mount the support joint with wood screws. (L = 60 or more recommended)

4. How to attach bracket


Adjust the top part of bracket and support joint to be align and then fix the bracket with wood screw (3.1 x 20 : 8pcs)
(Fix HFT model 2mm below the top)

⚠ Be sure to follow screw fixing dim. for each models.

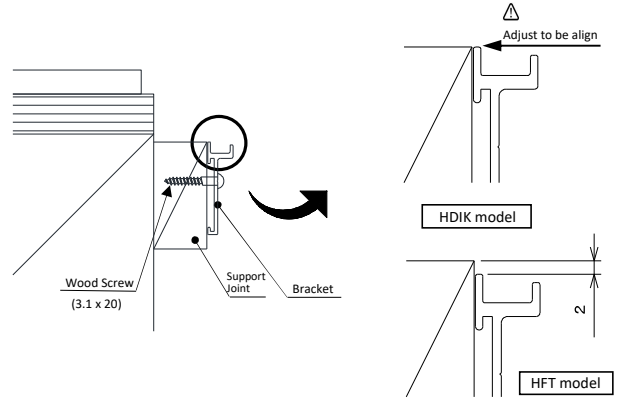

5. How to attach hanger bracket for storage unit

Align the mounting hole of the hanger bracket with bottom inner groove at center of the bracket, and secure it with pan head screws (4x19, two per side).
*Fix the screws in the same position on the opposite side.

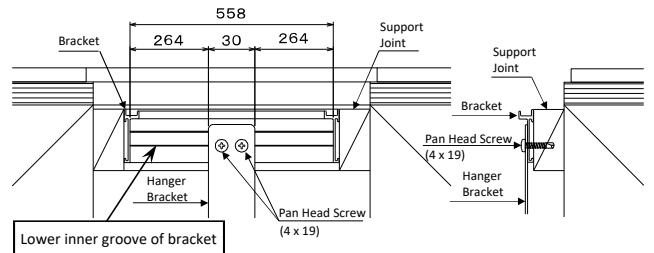

--- Point ---
When screw fixing, place a bracket below the hanger bracket to prevent instability.

6. Storage Unit Installation

Hang the storage unit on bracket until it is fully secured.

